

**EQUIPMENT FOR NONDESTRUCTIVE TESTING OF CABLES**

INTROS Basic Unit and Data Logger.  
Controls the cable tester INTROS.



INTROS Magnetic Head MH 60-85.  
For bridge cables, offshore cranes.



INTROS Magnetic Head MH 6-24.  
For elevators, cableways, cranes.



INTROS Magnetic Head MH 80-120/100-150.  
For bridge cables, offshore cranes.



INTROS Magnetic Head MH 20-40.  
For cranes, mines, ropeways, OHTL.



INTROS Magnetic Head MH 24-64.  
For mines, cranes, ropeways.



INTROS Electromagnetic Head EH-300.  
For bridge cables with parallel strands.